




GLOBAL LINK DISTRIBUTION KEY CYLINDER

REMOVAL

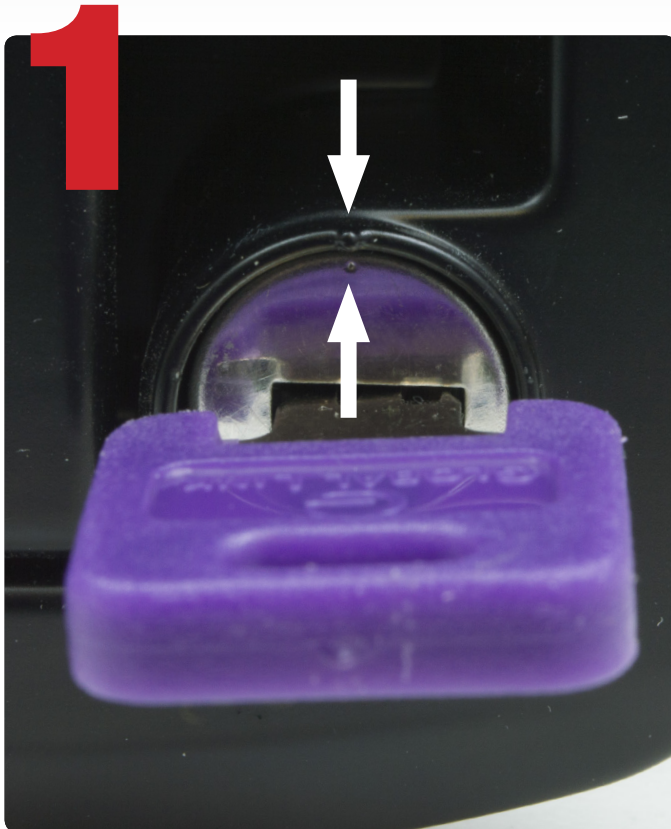

Cylinder Alignment

Use the GLD User key (purple key) to align the dimple on the cylinder with the cylinder housing dimples.



Key Cylinder Removal

Insert the GLD Change key (yellow key) and remove cylinder.

Notes:

- 1) The "M" Cylinder is the Master Cylinder used only in the entrance door paddle handle.
- 2) Non-Mastered cylinders are used in the deadbolt lock and/or any where you want Non-Mastered key access.



Mastered
Cylinder
with
GLD Master key



Non-Mastered
Cylinder
with
GLD User key



GLOBAL LINK DISTRIBUTION KEY CYLINDER

INSTALLATION

**GLD
Master Key**
For Master
cylinders



**GLD
Change Key**
For Non-
Mastered
cylinders



**GLD
Change Key**
For cylinder
install and
removal



1a. T-Slot Alignment

Make sure the bottom of the T-slot in the cylinder housing is pointed to the opposite side as the alignment dimples. If not, adjust with screwdriver.



Change Key Removal


Once the key cylinder is fully inserted, firmly place thumb over face of cylinder and withdraw the change key. Cylinder face should appear recessed in the housing for secure fit.

Seating the Key Cylinder

Insert the GLD user key (purple key) with matching key code and rotate the key to properly seat the key cylinder inside the housing.

1b. Cylinder Insertion

Insert cylinder with GLD Change key (yellow key) making sure the dimples on the cylinder face and cylinder housing are aligned.

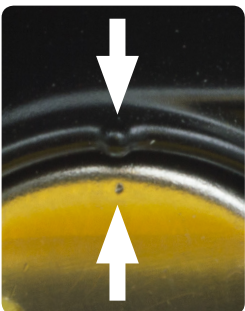

Notes:

- 1) The "M" Cylinder is the Master Cylinder used only in the entrance door paddle handle.
- 2) Non-Mastered cylinders are used in the deadbolt lock and/or any where you want Non-Mastered key access.



Mastered
Cylinder
with
GLD Master key



Non-Mastered
Cylinder
with
GLD User key