



# INSTALLATION INSTRUCTIONS

## Nautilus P1 Handle Position and Valve Routing Information

**WHITE HANDLE:** Receives water from water inlet on front of panel

Sideways – water goes into blue handle diverter



Down – water goes to pump inlet



**BLUE HANDLE:** Receives water from white handle valve/water inlet on front of panel

Sideways – water goes to or comes from fresh water tank




Down – water goes to fixtures (cold)



**BLACK HANDLE:** Is an on/off flow through valve that feeds pump from fresh water tank

Sideways - water will not flow through valve

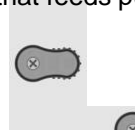

Down – water goes to or comes from fresh water tank



**RED HANDLE:** Receives water from cold water supply line

Sideways - water goes to hot water fixtures without going through hot water heater



Up – water goes to hot water heater



**GREEN HANDLE:** Receives water from pump

Sideways - water goes to fresh water tank



Up – water goes to fixtures

