THE FLUSHER

THE FLUSHER protects your black water tank from buildup and blockages. This easy-to-install system eliminates the need for hooking up hoses inside the RV to flush out the holding tank. Plus, it helps control unpleasant odors. THE FLUSHER meets all applicable codes for wasteholding tank flushing systems.



TANK SPRAYER


Tank Sprayer not to exceed 2" below the top of the wasteholding tank.



ATMOSPHERIC VACUUM BREAKER/ CHECK VALVE

(94239) must be 6" above flood rim of the highest fixture connected to the wasteholding tank. (ASSE 1001-02; device shall not be installed where the venting of water from the device during normal functioning will cause damage.)



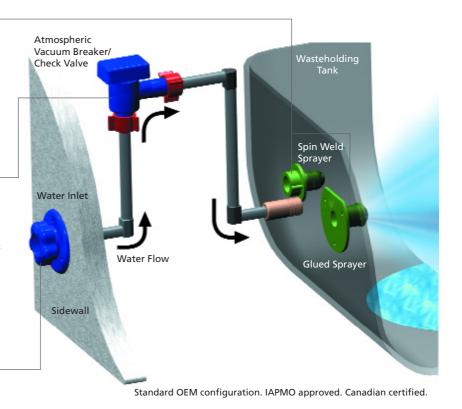

Ask for THE FLUSHER system by name or part number.

	THE FLUSHER - GLUED		
	PART ID	TANK STYLE	ITEMS INCLUDED
BBT-94231		ABS	Water Inlet, Atmosphere Vacuum Breaker/ Check Valve, Glued Tank Sprayer, Warning Label, Installation Instructions



BBT-94239	Vacuum Breaker/Check Valve	
BBT-94232	Glued Sprayer	
BBT-94233	Water Inlet (plastic)	
BBT-94234	Water Inlet (brass)	





