

INSTALLATION INSTRUCTIONS

Nautilus P3 Handle Position and Valve Routing Information

WHITE HANDLE: Receives water from water inlet on front of panel
Sideways - water goes to pump inlet
Down – water goes into blue handled diverter
BLUE HANDLE: Receives water from the white handle valve/water inlet on front of panel
Sideways - water goes to fixtures (cold)
Down – water will go to or come from fresh water tank
GREEN HANDLE: Is an on/off flow through valve that feeds pump from fresh water tank
Sideways - water will not flow through valve
Sideways - water will not flow through valve Up – water will go to or come from fresh water tank
Up – water will go to or come from fresh water tank



58471 Fir Road, Mishawaka, IN 46544 Phone: (574) 259-7838 Fax: (574) 259-7939 www.bandbmolders.com