


PARTS LIST (With Descriptions)

Exterior Lock Assembly



- A:** Deadbolt Cylinder (Non-Mastered)
- B:** Handle Cylinder (Mastered)
- C:** Keypad

Interior Lock Assembly

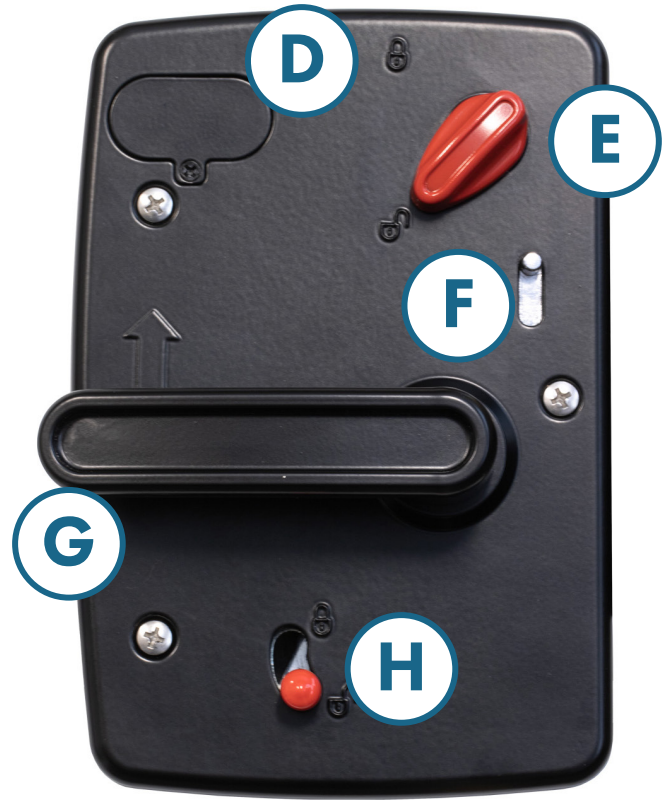

- D:** Battery Cover
- E:** Deadbolt Knob
- F:** Safety Release Lever
- G:** Interior Handle
- H:** Exterior Handle Lock

Keys
Qty 2



Fasteners
Qty 3



CR123 Batteries
Qty 2

- Contained in Battery Compartment
- Approximate 360 Day Life Cycle



Global Link® MRL Ultra Pro ES

Bluetooth® Smart Lock (MRLBT-42560-2006)



LOCK FUNCTIONS (With Descriptions)



KEY: Locks and unlocks the deadbolt and handle. Key is retained by the cylinder in the locked position. Key will extract when the cylinder is in the neutral position.



KEYPAD: Locks and unlocks the deadbolt components of the lock. *Does not unlock the handle lock cylinder.*

GLOBAL LINK® CONNECT APP: Locks and unlocks the deadbolt components of the lock. *Does not unlock the handle lock cylinder.*



DEADBOLT KNOB: Locks and unlocks the deadbolt components from the inside of the unit. Is operated manually, with key, and remotely via the Global Link® Connect App.

SAFETY RELEASE LEVER: Bypasses locked deadbolt components and allows for the interior handle to open the lock from the inside. **OPERATION:** Slide the lever up **and hold** to release the interior handle and open the door when the deadbolt knob is in the locked position.

EXTERIOR HANDLE LOCK: Locks and unlocks the exterior handle. This is standard on most motorhome entry locks.



WARNING: It is only to be used while unit is occupied. *Is not controlled by the keypad or Global Link® Connect App.*